


## MAMOD TOURER GAS UNIT INSTALATION

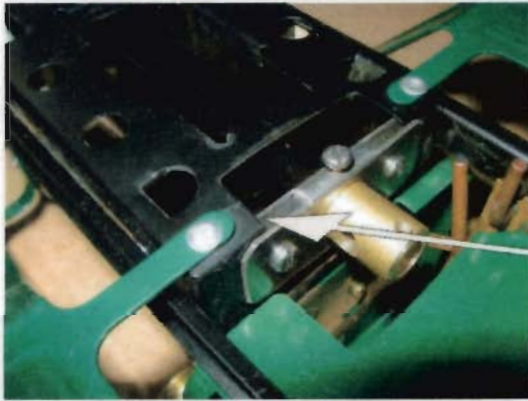


REMOVE RIGHT HAND SCREW, FIT BURNER INTO PLATE BUT DON'T TIGHTEN IN PLACE, SLIDE GAP IN PLATE INTO FIREBOX BULKHEAD

FIT GAP IN LEFT HAND SIDE OF PLATE ONTO BULKHEAD, CENTRE PLATE AND POSITION BURNER, TIGHTEN SCREWS, DON'T OVER TIGHTEN

CUT STRIPS OF VELCRO AND FIT IN THE POSITIONS SHOWN ON TANK AND MODEL

FIT TANK INTO POSITION, FIT PIPE TO TANK, POSITION THE JET HOLDER INTO BURNER, POSITION JET AS DETAILED BELOW

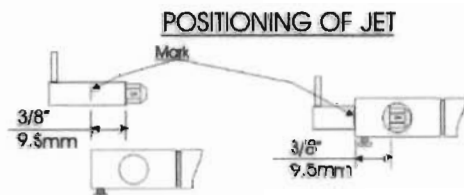

PUT MARK ON JET HOLDER IN POSITION SHOWN, ASSEMBLE INTO BURNER UP TO MARK, TIGHTEN LOCKING SCREW, MINOR ADJUSTMENT MAY BE NECESSARY TO OPTIMISE FLAME

SOME ADJUSTMENT OF PIPE BENDS MAY BE NECESSARY, FOR EVERYTHING TO FIT CORRECTLY

CHECK TANK VALVE IS TURNED OFF AND CONNECTION IS TIGHT, FILL TANK WITH GAS (BUTANE OR 70/30 BUTANE PROPANE MIX) BEFORE LIGHTING BURNER READ AND FOLLOW THE SAFETY AND USAGE INSTRUCTIONS ATTACHED. CONTINUE FOLLOWING MAMOD INSTRUCTIONS. WHEN LIGHTING GAS USE A LONG GAS COOKER LIGHTER, HOLD FLAME ABOVE CERAMIC WHILE SLOWLY TURNING ON GAS. KEEP AT ARMS LENGTH